




Make from scrap 1/4" foam  
with BID on each side

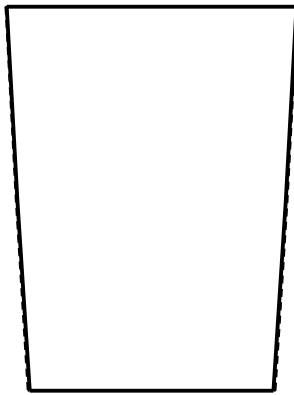


Bottom

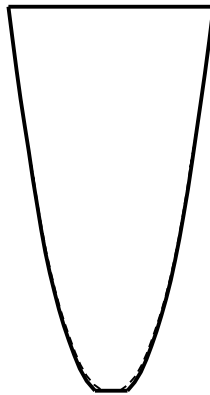

Middle  
Bottom

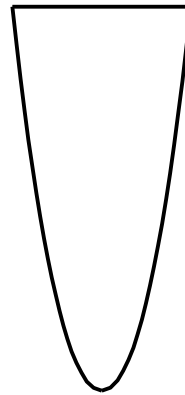

Middle  
Top

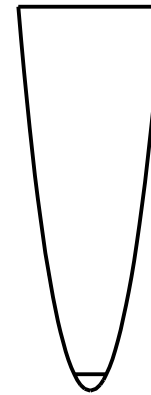

Top

SCALE 1.000

Position Templates on the front  
side of the forward spar opposite  
where the four ribs are located.  
Unlike the ribs, these parts  
should be set 90 degrees to the  
front spar surface

	SUPER2		
	Vertical Stabilizer Leading Edge Templates		
Nov, 11, 2009			